

What and Why to Weigh

	Motorhome	Towed Vehicle (Toad)	Truck/Car for Pulling	Trailer or 5th Wheel
What To Weigh	Total weight. First, all axles on scale. Second, each axle separately.	Total weight. First, all axles on scale. Second, each axle separately.	Total weight. First, all axles on scale. Second, each axle separately.	Total weight. First, all axles on scale. Second, each axle separately.
Why Weigh This	Cannot exceed the GVWR, axle weight ratings (FAWR, RAWR) or the tire ratings.	Prevent overloading the toad or exceeding hitch/towing capacity.	Prevent overloading the vehicle, its rear axle(s), or underweighting the front axle.	Cannot exceed the GVWR, axle weight ratings, or the tire ratings, nor the tow vehicle's capacity.
Safety Is Compromised!	It is unlawful and affects safety and handling.	The hitch, suspension, tow bar, and tires may exceed their rated capacity.	May exceed Gross Combined Weight Rating (GCWR) or the towing capacity of the vehicle.	It is unlawful and affects safety and handling. The hitch, trailer suspension, and tires may exceed their rated capacity.